


Radiator DEK1 Mounting instruction Left.

PLEASE NOTE: Connection requires great precision!!

Water supply pipe
15mm hard duct

Retour pipe
15 mm hard duct

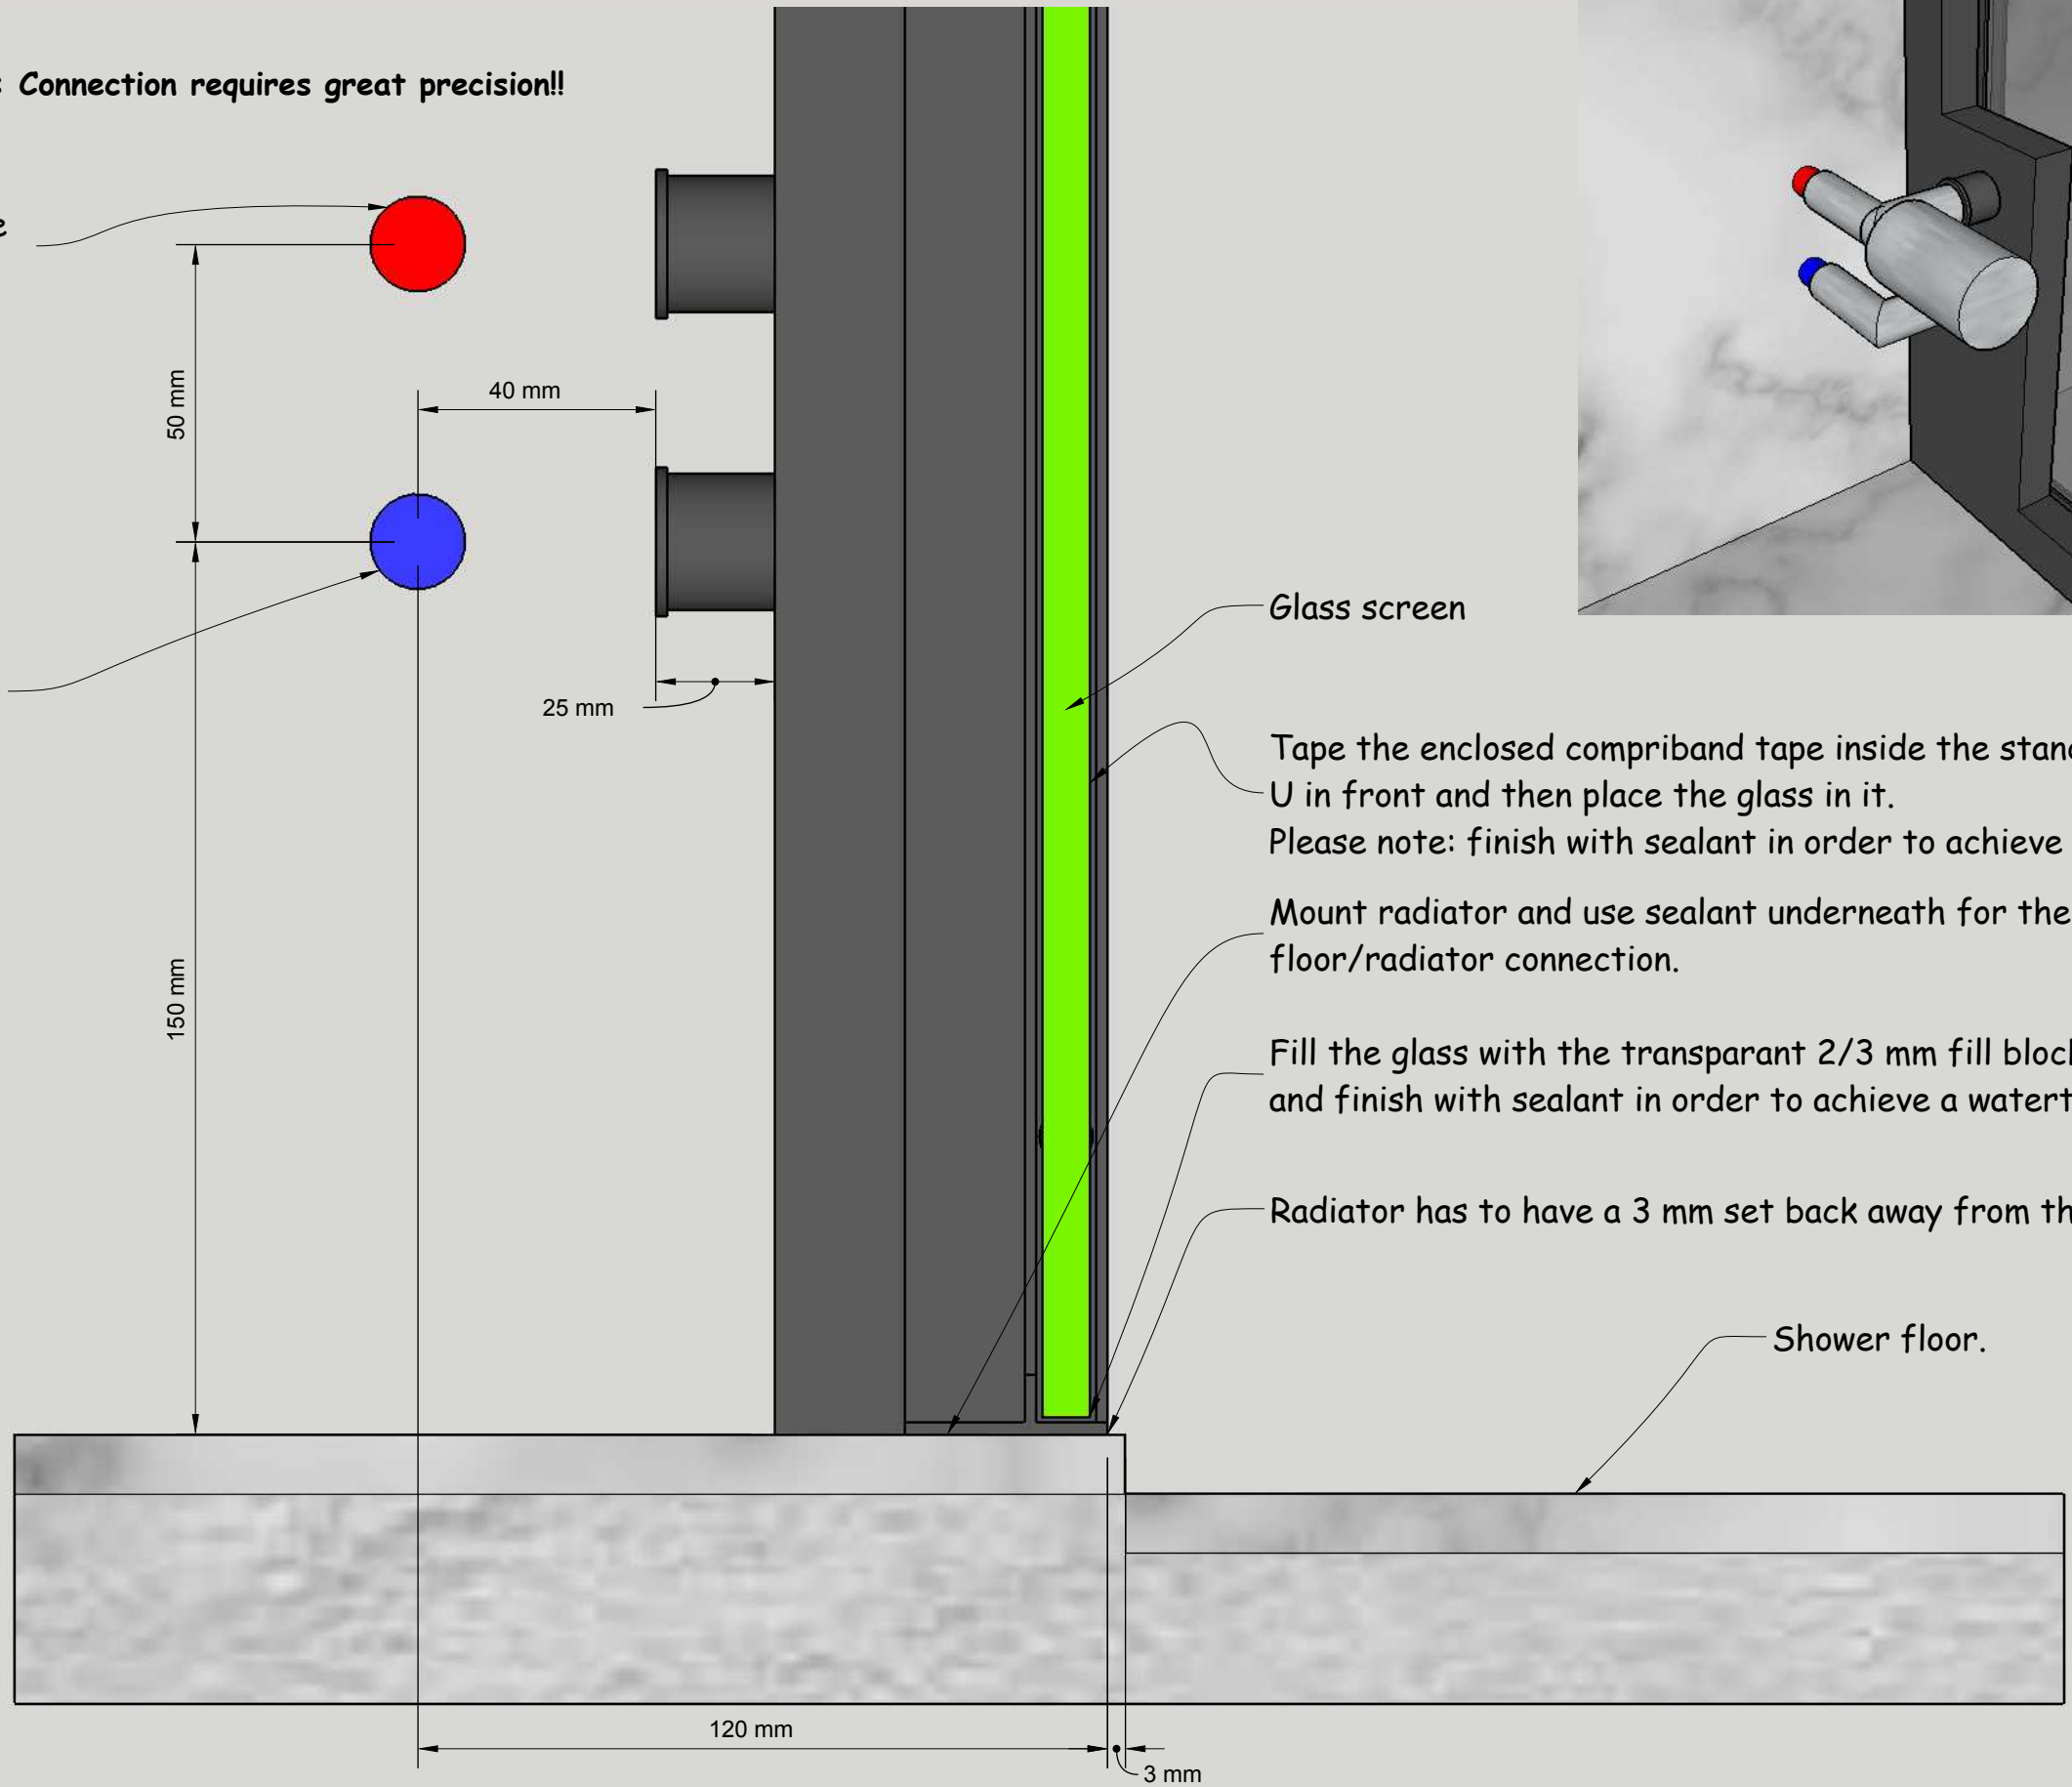

Glass screen


Tape the enclosed compriband tape inside the standing and upper lying U in front and then place the glass in it.
Please note: finish with sealant in order to achieve a watertight seal.

Mount radiator and use sealant underneath for the floor/radiator connection.

Fill the glass with the transparant 2/3 mm fill blocks and finish with sealant in order to achieve a watertight seal.

Radiator has to have a 3 mm set back away from the shower floor.

Shower floor.

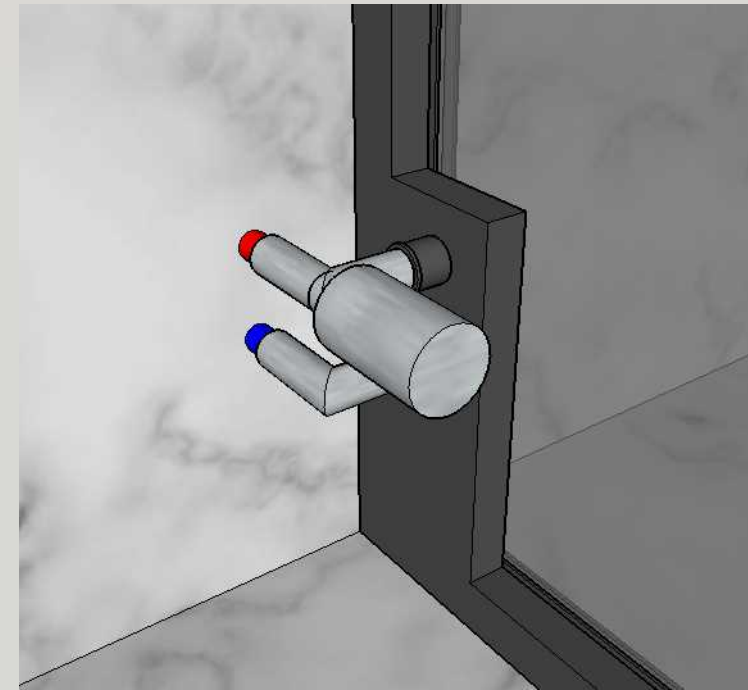

COLOR

DELIVERY

PROJECT

PROJECT NO.

Date

DRAWN BY
R Beekman