



### Radiator DEK2 Mounting instruction Right.

PLEASE NOTE: Connection requires great precision!!

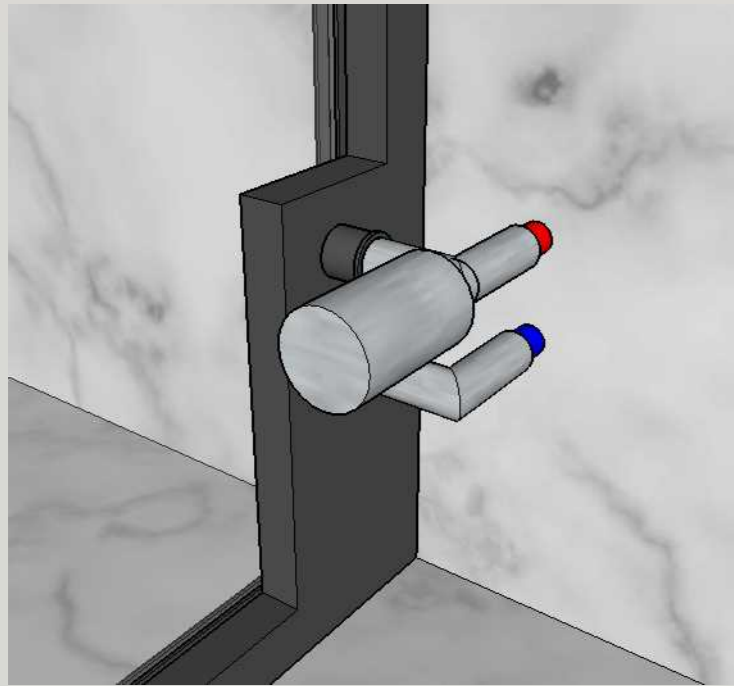

Glass screen

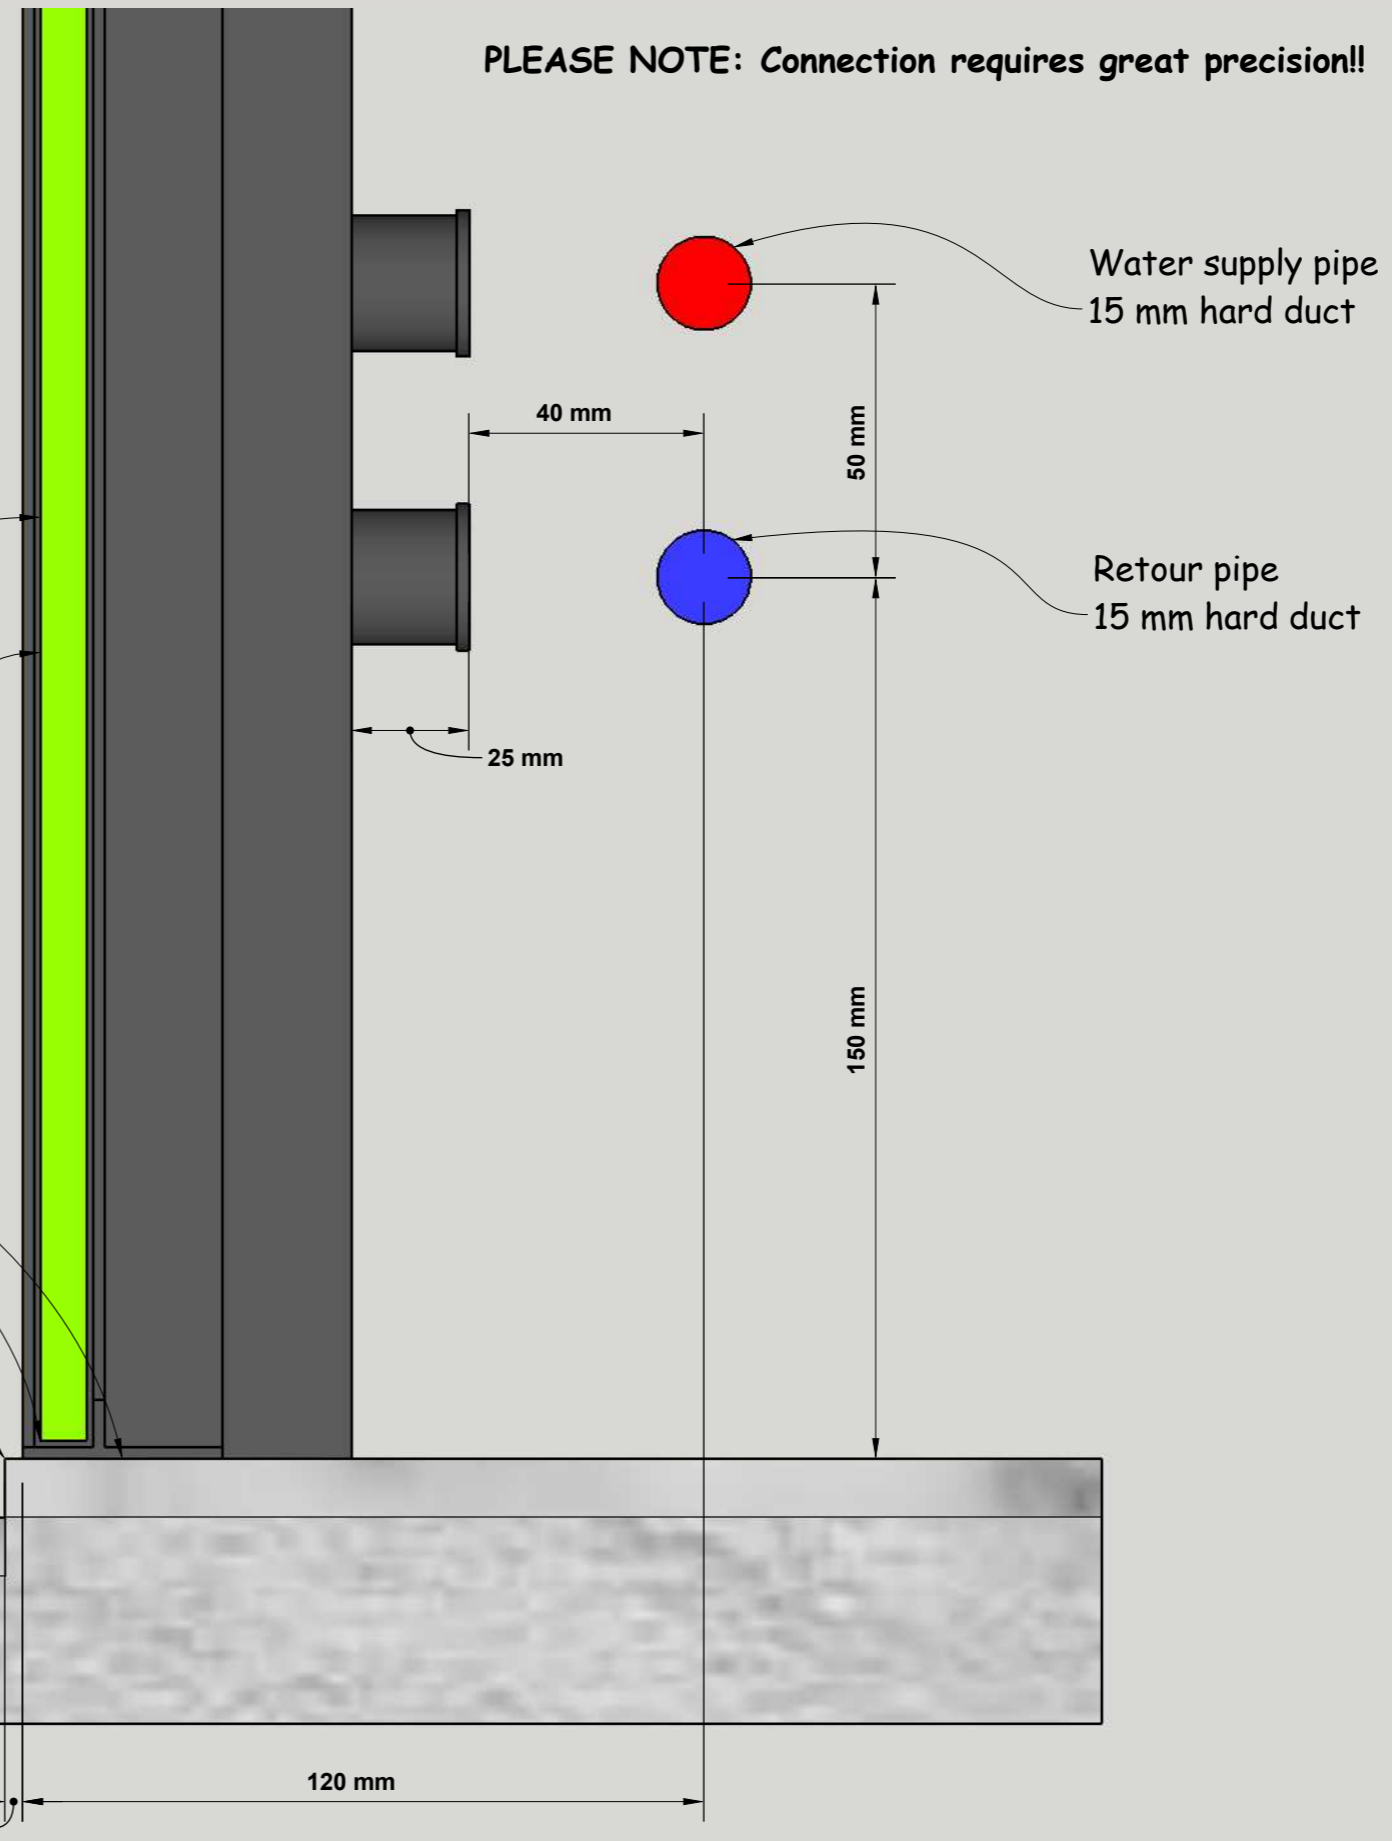

Water supply pipe  
15 mm hard duct

Retour pipe  
15 mm hard duct

Tape the enclosed compriband tape inside the standing and upper lying U in front and then place the glass in it.  
Please note: finish with sealant in order to achieve a watertight seal.

Mount radiator and use sealant underneath for the floor/radiator connection.

Fill the glass with the transparant 2/3 mm fill blocks and finish with sealant in order to achieve a watertight seal.

Radiator has to have a 3 mm set back away from the shower floor.

Shower floor.

COLOR

DELIVERY

PROJECT

PROJECT NO.

Date

DRAWN BY  
R Beekman